

# Software check and upgrade

## Preparation to upgrade software

- 1) Start the CD burning software & create a folder named "UPG\_ALL",
- 2) Then copy the Bin file (BDP2800.bin ) or (BDP2850.bin ) into it,
- 3) Burn the data onto the blank CD or USB. 1) Power on the set and open the tray door.
- 4) If the model is BDP2800, must use (BDP\_2800.bin ) to upgrade  
or if the model is BDP2850, must use (BDP\_2850.bin ) to upgrade.

### A. Procedure for software upgrade

#### A) Upgrade software via Disc

- 1) Power on the set and insert the prepared Upgrade CDR.
- 2) The set will start reading disc & response with the Model:BDP2850 following display TV screen: Versions:  
Now searching for upgrade software!  
Please wait...

- 3) Press <OK> button to confirm, then screen will display :  
An upgrade software has been found!  
Start upgrade with version:WKXXX.X?

- 4) Press Right cursor button to choose "Start", then press <OK>;
- 5) The software will upgrade and screen will display as below:  
Upgrade is ongoing, Please wait...  
Please do not unplug or switch off the device.
- 6) The screen will display as below when upgrading complete:  
Upgrade has completed successfully!  
Power off after 5s.

- 5) Restart the set.

#### B) Upgrade software via network:

- 1) Setup the network connection (See "Getting started">"Set up network").
- 2) In the Home menu, select <Setting>-<Advanced Setup>-<Software Download>-<Network>.
- \* You are prompted to start upgrading processes if upgrade media is detected.
- 3) Follow the instructions on the TV screen to confirm update operation.
- \* Once software update is complete, this player automatically turns off to standby.
- 4) Disconnect the power cord for a few seconds and connect again to turn on the player.

#### C) Update software via USB Flash Drive:

- 1) Go to [www.philips.com/support](http://www.philips.com/support) to check if the latest software version is available for this player.
- 2) Download the software onto a USB flash drive.
- 3) Insert the USB flash drive to the USB jack of the rear panel.
- 4) In the Home menu, select <Setup>-<Advanced Setup>-<Software Update>-<USB>.
- 5) Follow the instructions on the TV screen to confirm update operation.
- \* Once software update is complete, this player automatically turns to standby.
- 6) Disconnect the power cord for a few seconds and connect again to turn on the player.

## B. Read out the software versions to confirm upgrading

- 1) Power on the set and open the tray door.
- 2) Press <Home> button on the remote control.
- 3) Select <Setup>, then press <OK>.
- 4) Select <Advanced Setup>, press right cursor to choose

<Version Info.>, then press <OK>, the software version and other information will display on the TV screen as below:

Model: BDP2800/BDP2850  
Version:

<http://www.philips.com/support>  
MAC:XX-XX-XX-XX-XX-XX

Caution: The set must not be power off during upgrading, otherwise the Main board will be damaged entirely.


## OPU Setting Alignment Procedure ( for main board repair ):

### Presetup steps:

- A) keep all FFC cables connected between Loader and Main Board.  
(Pos. HA800 & Pos. HA900 on Main Board)
- B) must disconnect 4 pins wire on Pos. HA901 as shown in Pic. 1

### Procedure:

1. Record the 1D barcode with barcode reader or all the 32 digits of label attached on the top of original loader (if replaced with a new main board) or new loader spare part (if replaced with a new loader) as shown in Pic.2 .

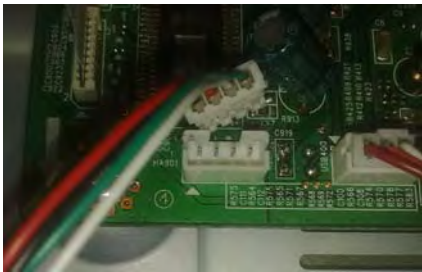


Pic. 1




Pic. 2



2. Power on the set and connect with TV, press “5” “1” “7” “7” by remote control when in the HOME menu, it will enter a special menu with 7 options. Use “Up” and “Down” button by remote control to select option “[5] Repair”

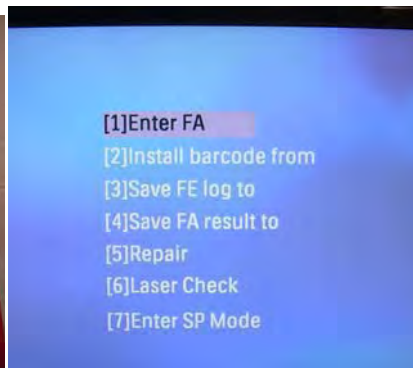



3. When you see this screen, please plug a blank USB drive. After that press “Enter” to install barcode.

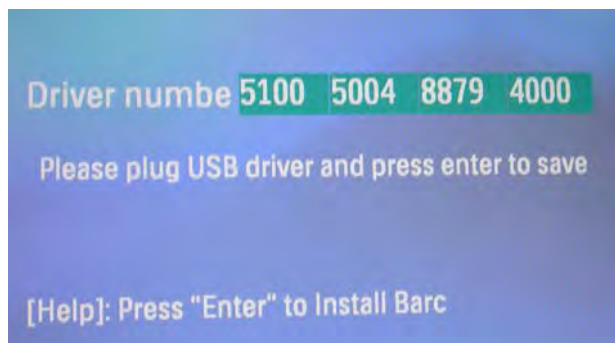


- Input all 32 digits by remote control, then press “Back” and then press “Enter” to save the setting.

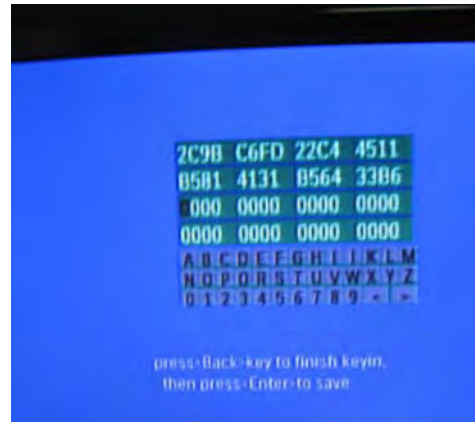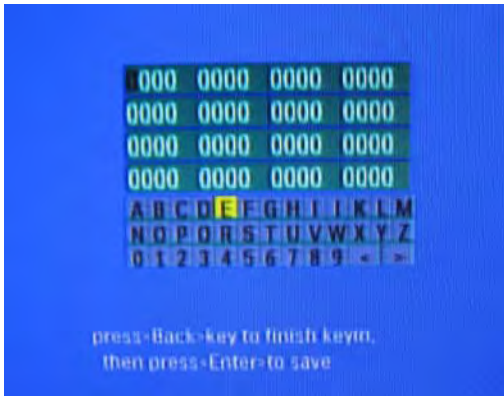

- If setting is saved successfully, it will display “Pas” on screen. Otherwise, it will display “Fail” on screen. If “fail”, confirm the 32digits information again. (this is like a password, it failed if we input the wrong password)

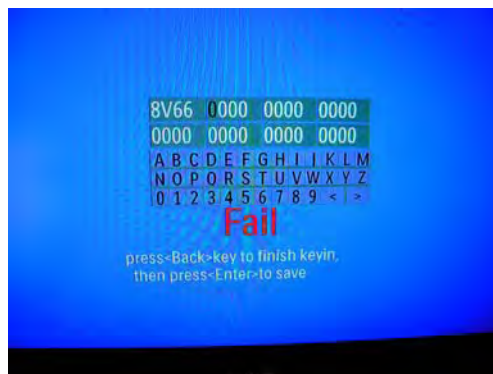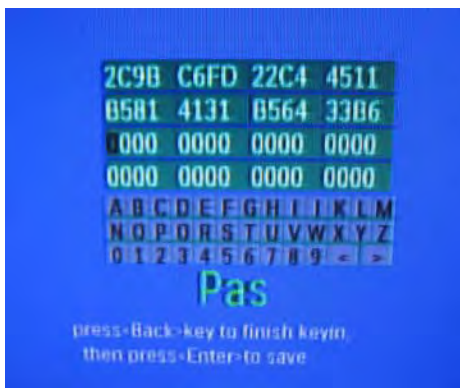

- Press “Stop” key on remote control to go back the HOME menu again, and then press “5” “1” “7” “7” by remote control to enter a special menu with 6 options again. Use “Up” and “Down” button by remote control to select option “[6] Laser Check”

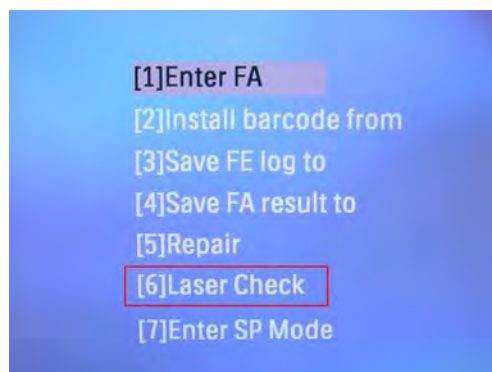

7. If the cable is well connected and welded protection point is ok, it will display "Passe" on screen.



8. Power off the set and connect HA901 again.
9. After connecting mains cord and restart the set, test with CD, DVD, BD disc.  
If ok, the repair procedure is finished!