

 
OPERATION INSTRUCTIONS

WARNING: The Main Power Switch is the Manually Operated Mechanical Switch (MOMS). It is requested to Manually to turn On and Off the Main power. The Remote control can not cut off main voltage at the TV set. For safety purpose, turn off the Main Switch manually when long time not use the TV or for the long vacation. Press once will turn on the Main supply of the TV set. The Power indicator will light up. To make sure the power is turn off, please fully press the Main switch and make sure the power indicator light off.


Turn the TV set on, then power indicator will light up. The picture will appear after a few seconds. (If tuned on) The program number is displayed on the top right-hand corner of the screen.

MENU BUTTON


1. Press this button to select menu. PRESET, PICTURE, SYSTEM, and TIME menu can be selected cyclically.




2. After enters each menu, you can select the item which you will adjust by PROG. +/- buttons, and adjust this item by VOL. +/- buttons.

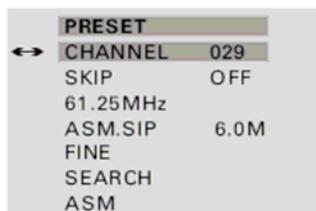


You can press digital button to select your desire channel
Set this item on to skip the channel which you are watching
The frequency of the current channel
Sound system of the current channel
Fine adjust the frequency of the current channel
Manual search program
Automatically search program

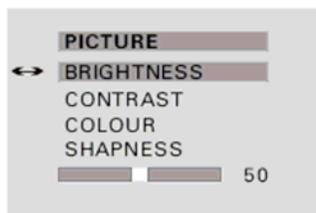

Adjusts dark or white areas of picture
Adjusts desired contrast intensity
Adjusts desired colour intensity
Adjusts clarity of outline detail

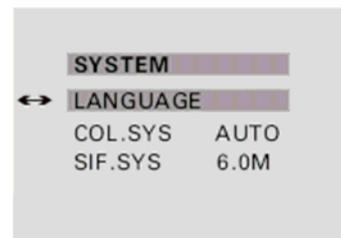

You can select the language what you want
Colour system
Sound system

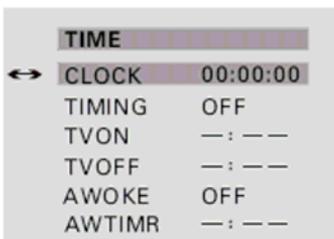

Times must be entered in CLOCK to operate the TIME feature
Turn on this function to use TIME feature
To turn the television on at selected time.
To turn the television off at selected time.
To turn the awake function on/off
Awake the TV at selected time


TV OPERATION

1. Assure that all the needed signal wires are connect to the TV set.

2. To turn on the TV, press the POWER button, and the power indicated LED lamp will be on.

3. If you first use this TV set, you have to search program, once you have done the following steps, the program list will be stored in the TV memory.

Press MENU button once and the PRESET function menu will be display on screen, choose the ASM and then press VOL± to start auto search. Once this function is finished the channel will goto the first program automatically.

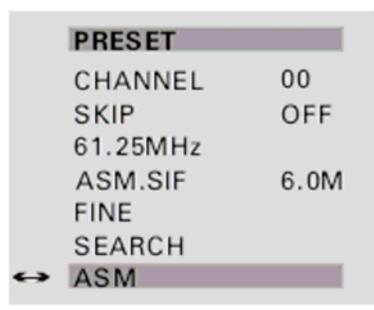

4. PROG +/- Buttons

Press and release the PROG +/- button, the channel automatically stops at the next/previous channel set into memory. Press and hold the button down to change channels more quickly Direct Channel Selection Buttons (0-9). Press these buttons to select a channel directly. The channel number will appear on the upper right corner of the TV screen. If an invalid channel number is selected, the display will revert to the previous channel.

5. The volume can be adjusted to a desired level by pressing the VOL +/- button the VOLUME will be indicated on the TV screen by GREEN BARS AND NUMBER. As the sound level increase, so do the BAR AND NUMBER on the screen, the same is true for decreasing the level.

6. **CHILD LOCKED** The TV set can provide the panel key control locked or prevent your children for watching the TV set. Press the "LOCK" button on remote control unit. The key locked () is displayed on the screen. Then the symbol will disappear after change of the program or released child locked mode. You can not use any panel control key on the TV set while locked. Only the remote control can normal operate the TV set .The "key locked " symbol () is displayed on the screen when turn off the Main switch and turn on again. It can release the child lock totally by pressing "LOCK" button or press the standby to turn off the TV set and turn on again .The child lock keep locked but you can operate the TV set by remote control. Keep the remote control out of child after locked.

NOTE:

If the station being viewed stops broadcasting and BACKGROUND being on, the TV will automatically shut off after 5 minutes.